

Technical data sheet

NEXO 140 BIO

Note for Switzerland:

For use without a chimney in Switzerland, the appliances are designed for a maximum output of 2 kW. Please note that different power ratings apply in Switzerland.

OPTIONS

| Firebox door | |
|---------------------|---|
| Steel door | ✓ |
| Glass door | ✓ |
| Side window | |
| Without side window | ✓ |
| Two side windows | ✓ |
| Coating | |
| Black | ✓ |
| Platinum | ✓ |
| Mocha | ✓ |
| Nickel | ✓ |
| Sand | ✓ |
| Handles | |
| Oak wood black | ✓ |
| «Classic» | ✓ |
| Stainless steel | ✓ |
| Corian® | ✓ |
| Calf leather brown | ✓ |
| Calf leather black | ✓ |
| Oak nature | ✓ |



Technical data sheet

NEXO 140 BIO

| Side bench | |
|--|---|
| Side bench narrow | ✓ |
| Side bench wide | ✓ |
| Operating | |
| Remote control | ✓ |
| Attika BIO App | ✓ |
| Control panel on the device | ✓ |
| Fireplace design | |
| Amber/black granules | ✓ |
| Ceramic-wood set | ✓ |
| Combination of amber/black granules and Ceramic-wood set | ✓ |
| without decoration | ✓ |

Technical data sheet

NEXO 140 BIO

PRODUCT INFORMATION

| General | |
|---|---------|
| Weight depending on model/equipment | 147 kg |
| fireplace connection | |
| Without a chimney (Please note the comment on the first page) | ✓ |
| Power supply | |
| Power connection | 230 V |
| Safety | |
| Automatic ignition | ✓ |
| automatic pump | ✓ |
| Built-in CO2 sensor | ✓ |
| Overfill sensor | ✓ |
| Overfill sensor | ✓ |
| Pressure relief valve | ✓ |
| Certifications | |
| European standard | EN16647 |
| TÜV | ✓ |

 SERVICES IN EU

| Technical specifications | |
|--------------------------|-------------------|
| Power (min.-max.) | 1.6 - 3.4 kW |
| Burning time (min.-max.) | 14 - 31 h |
| Fuel tank capacity | 7.8 L |
| Minimum room size | 34 m ² |

All information is provided without guarantee. Sketches are not true to scale.

01.07.2026 | 3 / 4

Technical data sheet

NEXO 140 BIO

Note Minimum room size:

Please refer to the information in the installation manual.

Safety distances:

Information on safety distances can be found in the installation manual.